

 
 


TECHNIC



42001






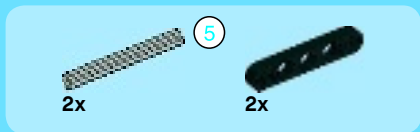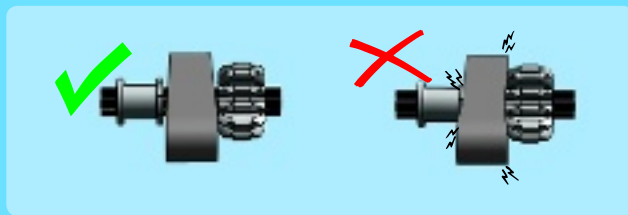

1

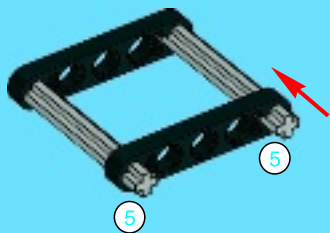  


2

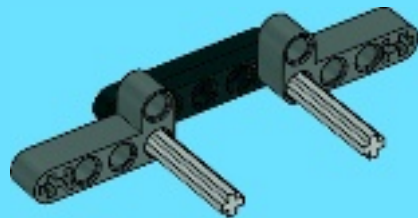 



2x

 3

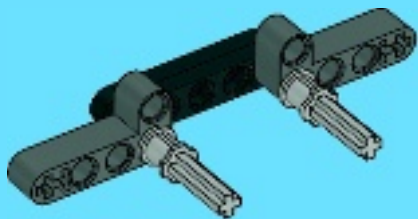


4



2x

 
4

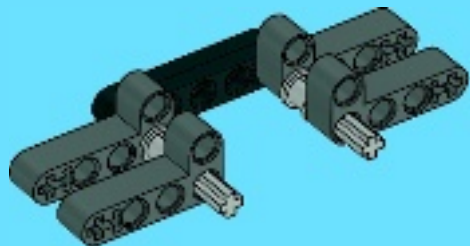




2x

 5

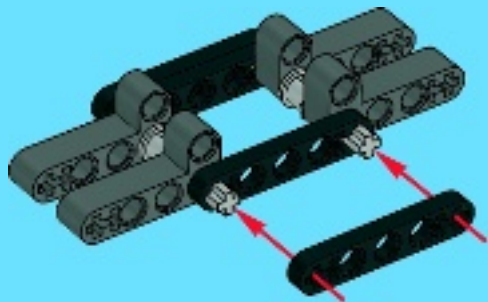

4x

 
6

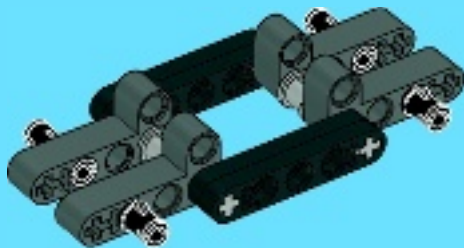



4x

 7

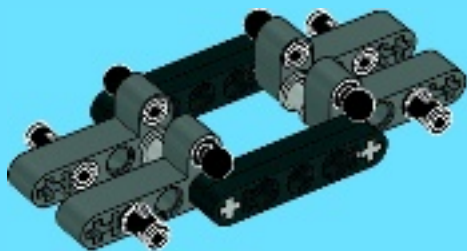




6





2x

   8


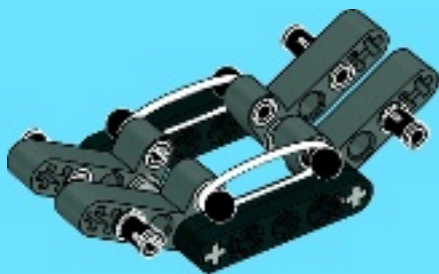


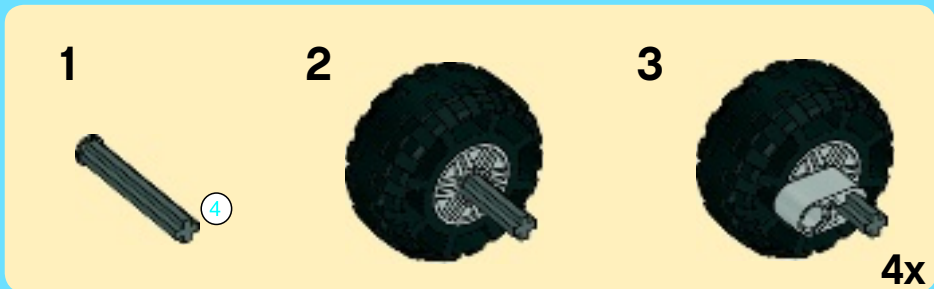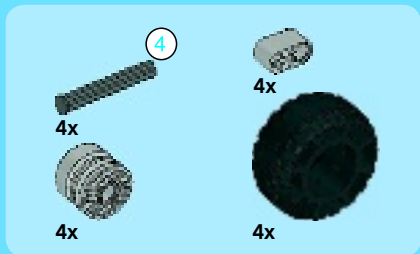

9

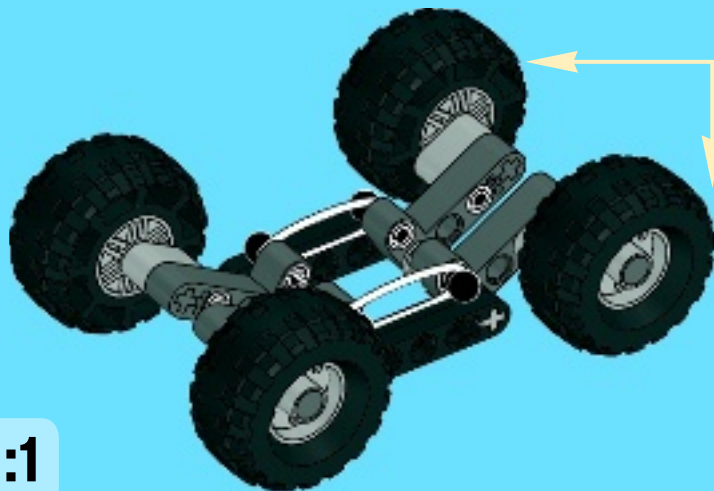  

10

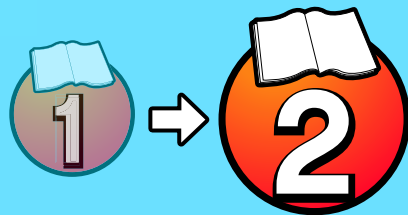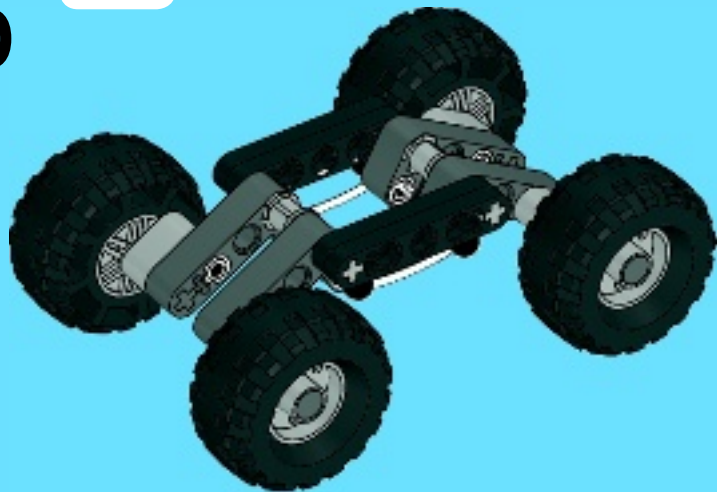  

2x
3005740
2x
3005741
4x
4299119
6x
6004888
2x
4211483
2x
4211573
4x
4211622
1x
4211815
5x
4211639
1x
4211805

2x
4121610
6x
4121715
2x
4107081
1x
370526
2x
4281515
1x
6022768
1x
6022767
2x
4655123

2x
4544140
5x
4142865
4x
4514553
4x
4506553
2x
4560174
3x
4121667
2x
4142236
4x
6030286
4x
4184169

2x
4210857
2x
4210980
2x
4210851
2x
4210686
1x
4210668

1x
4223767
2x
6005331
6x
4560177
6x
4210667



Customer Service
Kundenservice
Service Consommateurs
Servicio Al Consumidor
LEGO.com/service or dial

: 00800 5346 5555

: 1-800-422-5346



TECHNIC



42011



42004



42002



42010



42007





3



www.LEGOclub.com/Max

LEGO club™

FREE*! GRATIS! GRATUIT!

*Paid subscription in Australia and New Zealand.
*Abonnement payant en Australie et Nouvelle-Zélande.

 LEGO.com

6043037 / 6043039

LEGO and the LEGO logo are
trademarks of the/son des marques
de commerce de/son marcas
registradas de LEGO Group.
©2013 The LEGO Group.

